
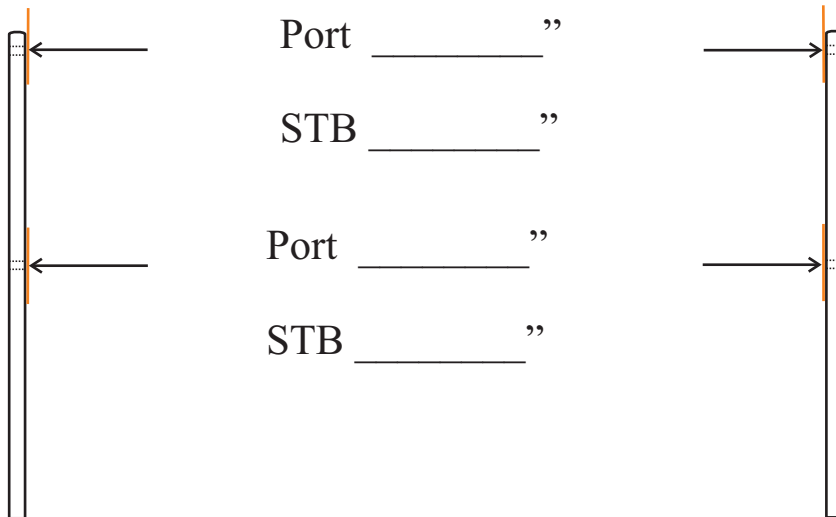
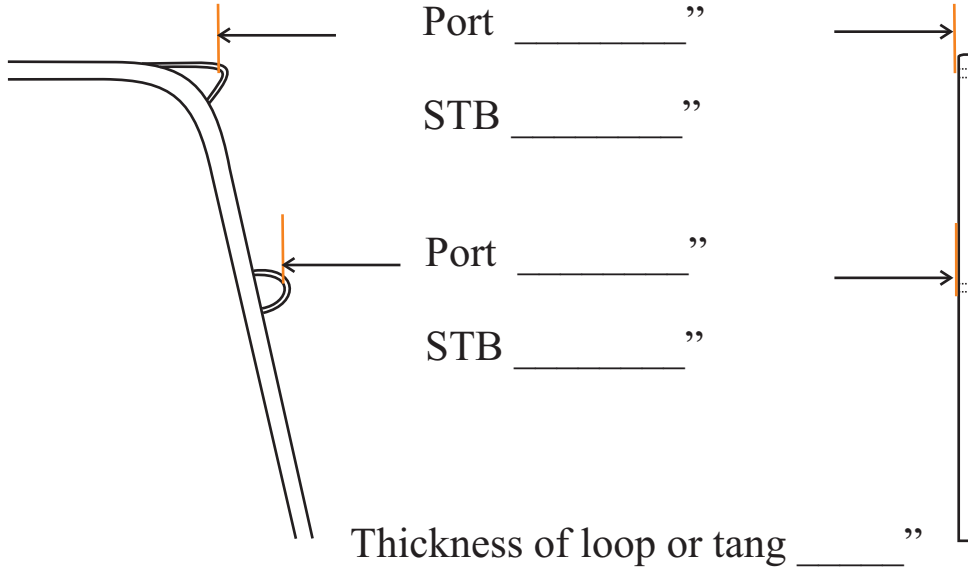


Measuring for Tubular Lifelines

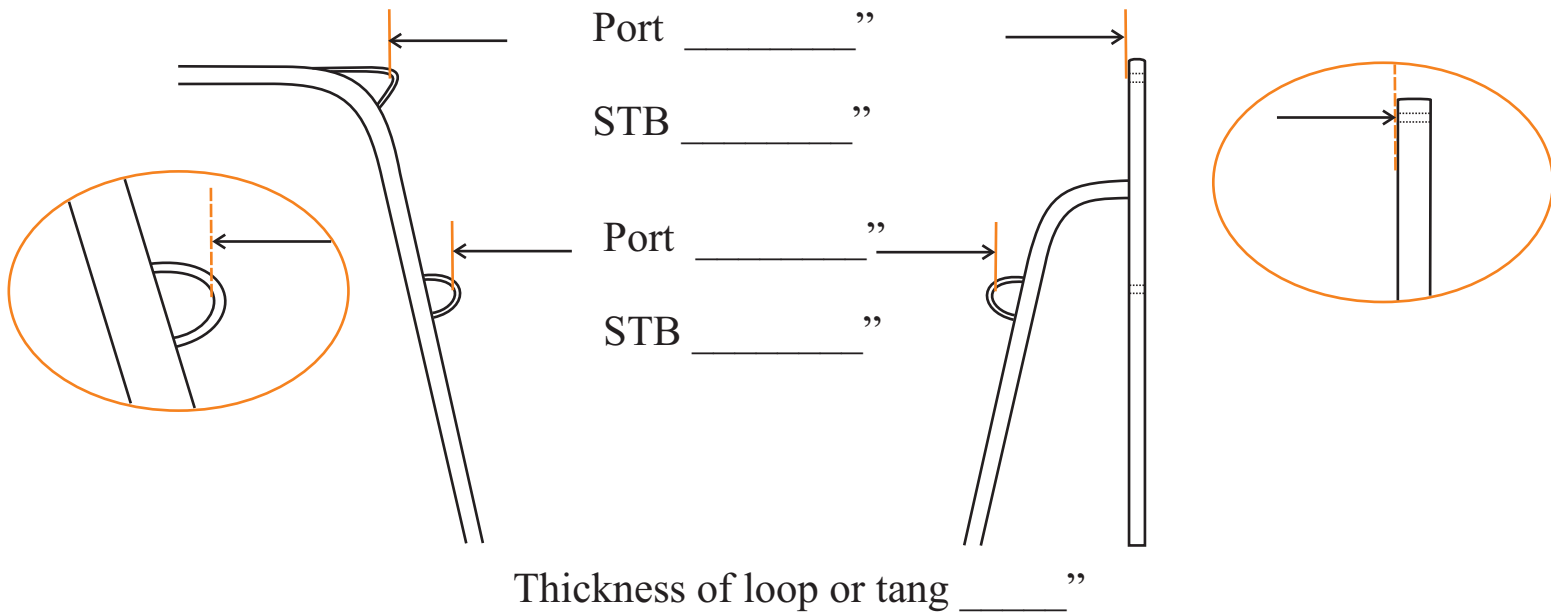

Measure very carefully, as a 1/16” can make the difference between a perfect fit or a struggle to fit. This is particularly true when measuring for both uppers and lowers. So measure twice or even thrice!